

Optimyst Set Up Instructions



1. Unpack the Optimyst tray and place into the hearth of the suite ensuring the controls are at the front and that the cables are accessible from the back of the suite.
2. Before positioning the suite against the wall, connect the heater unit and the Optimyst using the cables that you have just fed through the bottom the suite.
(Ensure that the cables are in the right orientation before plugging them in.)
3. Connect the thermometer (thin red and black wires) to the tray at the same time.
4. Then slide the tray into the cut out in the suite.

Fig. A



Fig. B

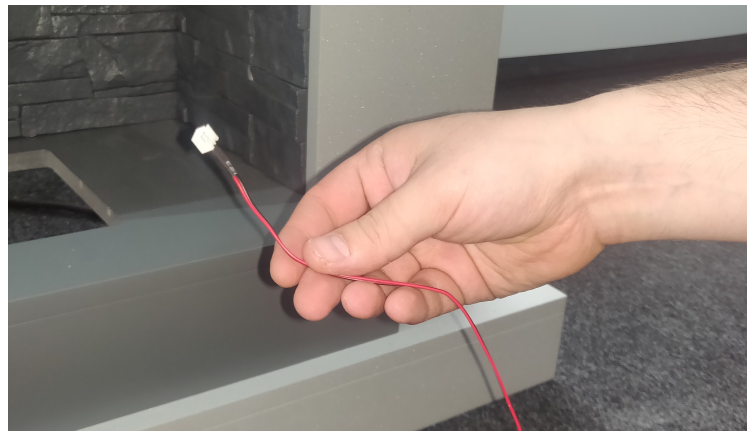


Fig.C

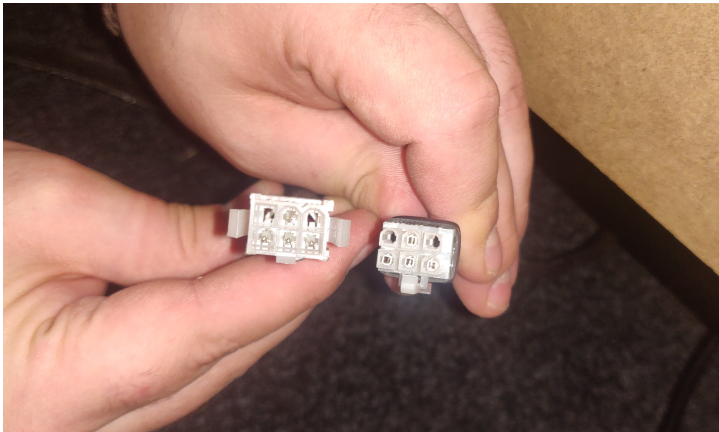


Fig. D



Fig. E



Fig. F



Quick Operation Guide to Optimyst Pro:



Part of the **Charlton & Jenrick** Group
Best of British fires, fireplaces & stoves

- 1) Turn on the fire by holding down **ENTER**
- 2) To operate the heat press the down arrow until you come to the **"HANDS"** symbol then press **ENTER**
- 3) The remote should state a temperature. If the temperature stated on the remote is higher than the current room temperature then the heater will come on eg if the remote is 19° and the room temperature 21° then the heater will not come on. To adjust the heat temperature use the arrows on the remote
- 4) If the remote states **OFF** then hold down **ADV** until **HILO** is activated and flashing. Press **ENTER** for the heat to work. Then revert back to 3.
- 5) To turn the heater off press **ENTER** on the **"HANDS"** setting. Pressing **BACK** means the heater will remain on
- 6) To turn the flame effect off press **ENTER** on the main screen